


Using "Set Miter" to set the scale on your saw


1. Set 0.0 here




2. Measure wall
(reads 44.0)

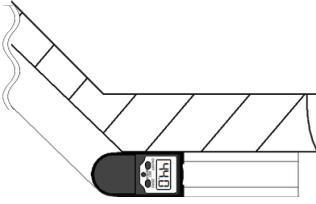


3. Press "Set Miter"
(reads 22.0)

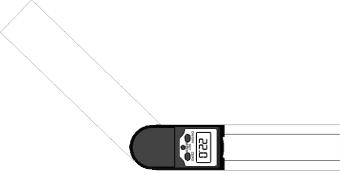

4. Set miter saw
on 22 degrees

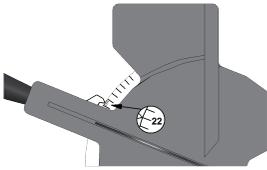

5. Press
"Set Miter" again
(reads 44.0)

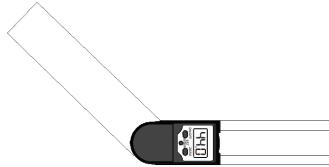


Using "Set Miter" to directly set the blade angle on your saw


1. Set 0.0 here




2. Measure wall
(reads 136.0)

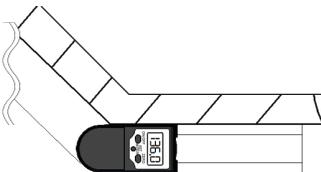


3. Press "Set Miter"
(reads 68.0)

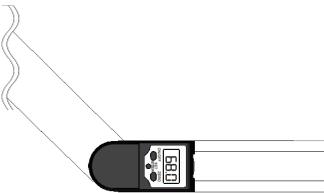


4. Close blade to read 0.0

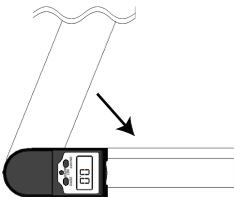

5. Set miter saw with
protractor on 0.0

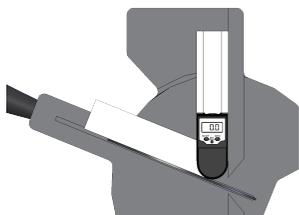

6. Press "Set Miter" again
(reads 68.0)

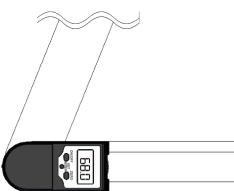

Wixey™


Model WR 412
US patent no. 7,726,034

12" DIGITAL PROTRACTOR with set miter function



SAFETY FIRST

- Always turn off and unplug power tools before using the Digital Protractor
- Never use your power tools without properly installed blade guards. The guards may not be shown in our instructions only to make the illustrations clear.


MEASURE CW

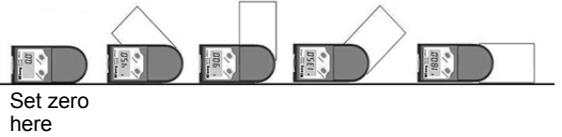

MEASURE CCW

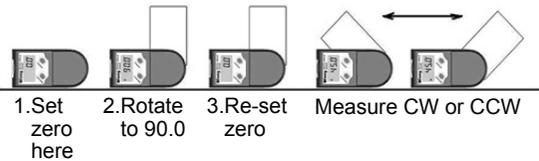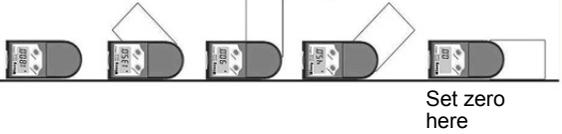


Magnets imbedded in all 4 edges of the blades

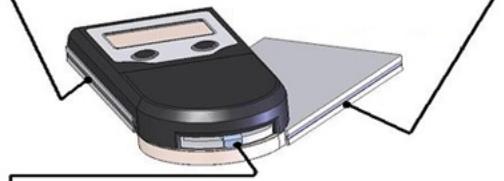

Lever tightens blades to hold measured angles

BATTERY REPLACEMENT

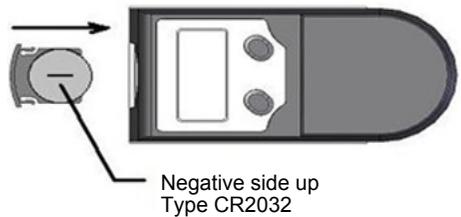

PROBLEM	POSSIBLE CAUSE	SOLUTION
Flashing Digits	Low Voltage	Replace Battery
No Display	Low Voltage	Replace Battery
No Display	Bad Contact	Clean Battery
Erratic or Frozen Display	Internal Error	Remove Battery Wait 1 Minute and Replace

For questions, comments
or to view our other products go to
www.wixey.com